

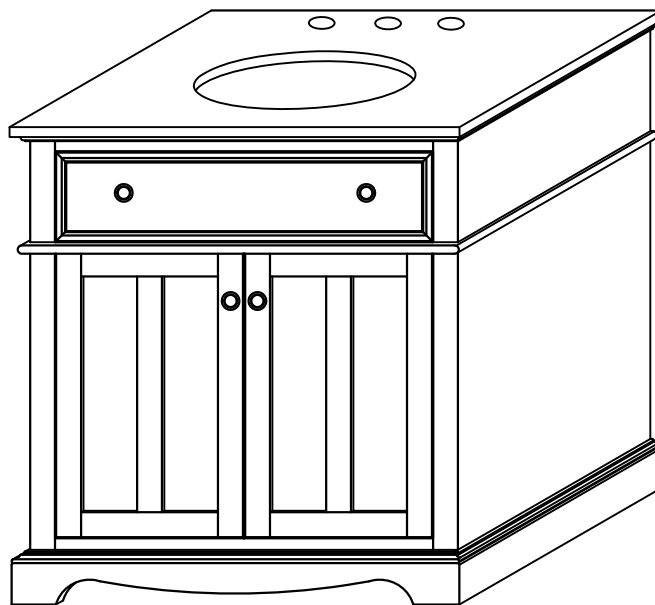
HOME DECORATORS C O L L E C T I O N

BF-25322 FREMONT SINGLE VANITY 34"Hx32"Wx22"D

INV#29438

ASSEMBLY INSTRUCTIONS

Made In China








PRODUCT SPECIFICATION:

- NATURAL GRANITE TOP PRE-ASSEMBLED
- (32W x 22D x 34.1H) INCH
- N.W.: 121.3LBS G.W.: 138.9LBS


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts, which may have came loose inside the carton during shipment. Count all parts and material hardware, then compare with parts list to be sure all parts are present. If any parts are missing or damaged, phone, fax, or mail to our Customer Service Department for efficient and speedy service. Please indicate the model number and code letter of part(s) needed.

IMPORTANT NOTE: Follow instructions listed below in proper sequence as numbered to assure fast, easy and correct assembly.

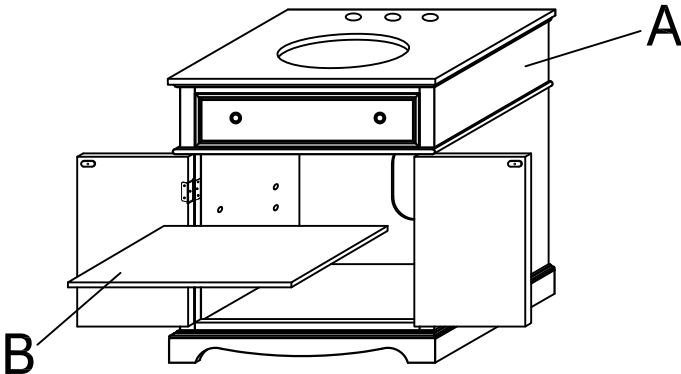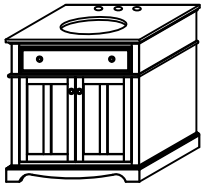NOTE: ● UPON OPENING THOROUGHLY CLEAN ALL WOOD SURFACES WITH FURNITURE POLISH TO REMOVE DUST AND DIRT THAT MAY HAVE SETTLED ONTO FINISH DURING SHIPMENT. IN ORDER TO PREVENT DAMAGE DURING ASSEMBLY, PLEASE ASSEMBLE THIS ITEM WITH AT LEAST THREE PEOPLE.


STRUCTURAL DIAGRAM			
			
PARTS LIST			
A  CABINET-1PC	B  SHELF-1PC	C  SHELF SUPPORTS-4PCS	D  FEET-4PCS

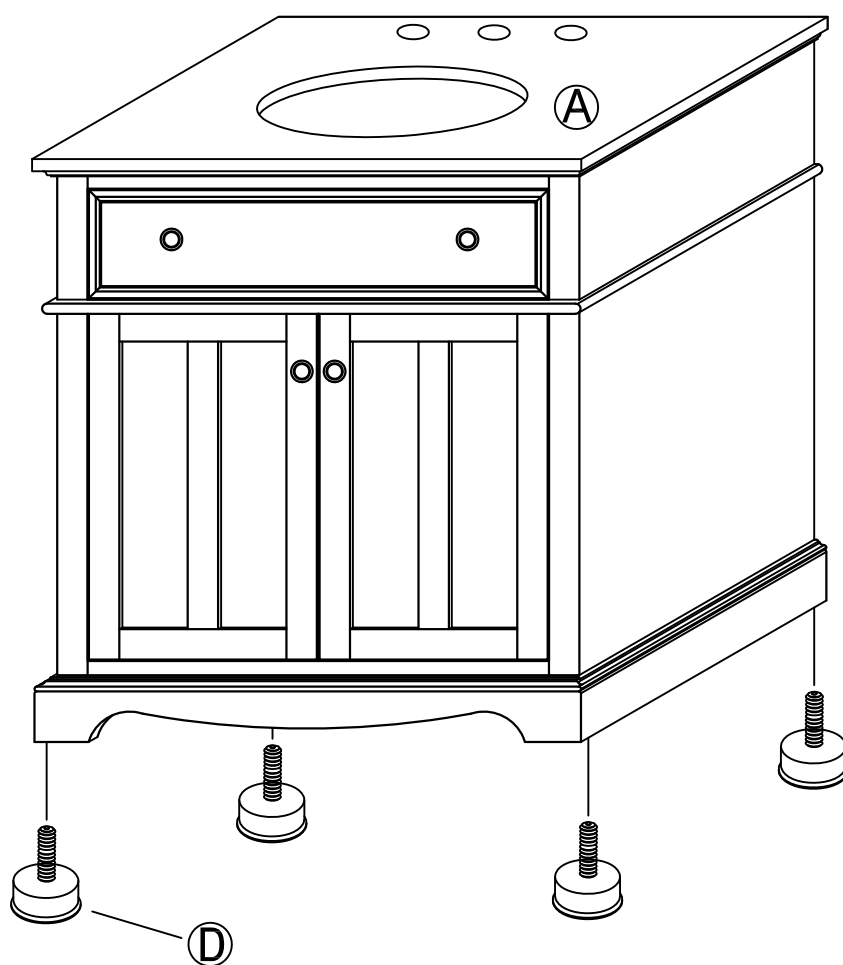NOTE: THE SURFACE WITH THE STICKER IS THE BACK SIDE.




1) . ASSEMBLE THE FEET(D) .

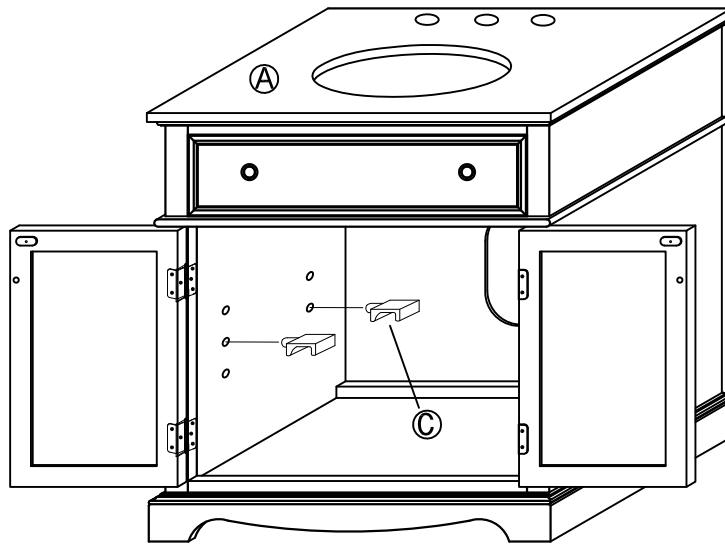- ROTATE 4 FEET(D) INTO THE HOLES IN THE CABINET(A) .



2) . ASSEMBLE THE SHELF SUPPORTS(C) .

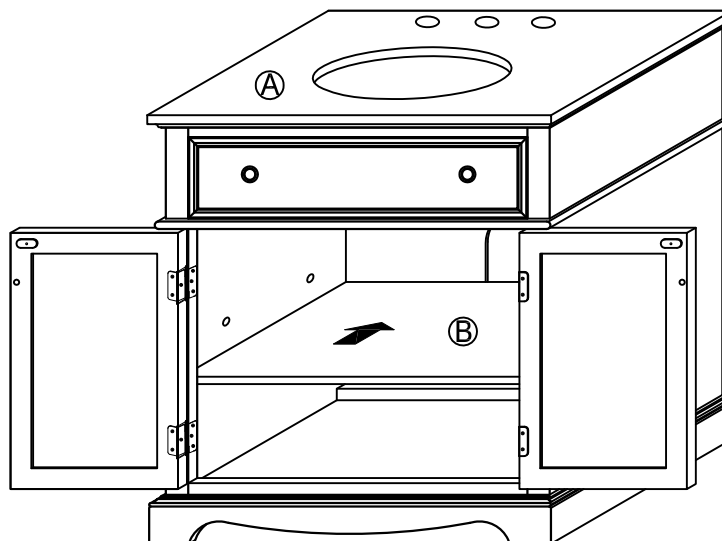- INSERT 4 SHELF SUPPORTS(C) INTO THE HOLES IN THE CABINET(A) .



3) . ASSEMBLE THE SHELF(B) .

- PUT THE SHELF(B) ONTO THE SHELF SUPPORTS(C) .